

CV SAVER FITTING INSTRUCTIONS – OUTLANDER/RENEGADE 1000

1. Safely remove wheels from the ATV as per owner's manual
2. Lay out all covers as per Diagram 1. Check all covers. The cone shape covers are outers and the rectangular shaped covers are inners. There are 2 different size rectangular covers, the smaller is the front inner and the larger is the rear inner.




3. Check all clamps for correct positioning. There are 4 types of clamps (see diagram 2 below)
 - L Inner front – 040
 - L Outer front – 010
 - R Inner front – 040
 - R Outer front – 010
 - L Outer rear – 010
 - L Inner rear – 048
 - R Inner rear – 048
 - R Outer Rear – 012



CV SAVER FITTING INSTRUCTIONS – OUTLANDER/RENEGADE 1000

4. Clean all CV boots, joint and boot clamps
5. Check direction of rotation (see below diagram). It is **VERY** important to ensure direction of rotation is correct.

Diag 8. Direction of rotation

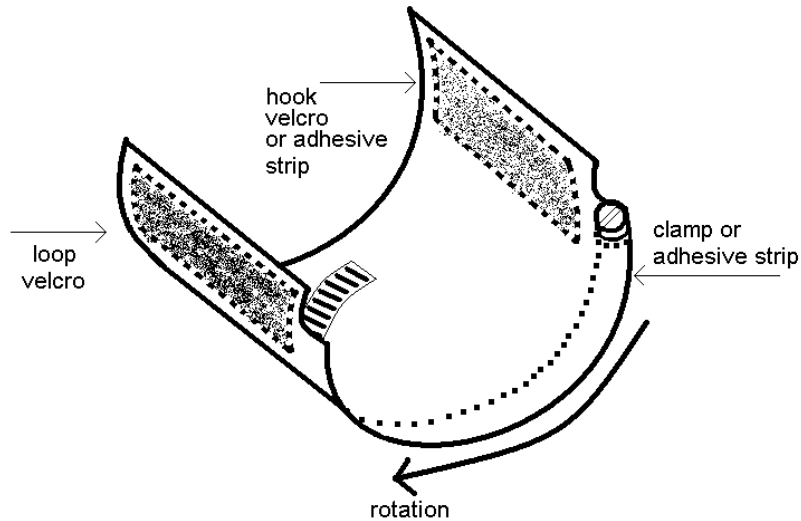

6. Select front inner cover, checking direction of rotation. Insert clamp into cover and wrap clamp and cover around joint. Place clamp and cover on the inside of boot retaining band.



Ensure clamp is even around joint. Place loop Velcro under clamp and tighten.

7. **Front outer**
 - Select a front outer cover and **010** clamp
 - Check direction of rotation to determine side to be fitted
 - Fit clamp to cover
 - Fit cover and clamp to AXL and CV boot
 - Start the thread on the clamp and tighten so the cover can slide up and down the axle.

CV SAVER FITTING INSTRUCTIONS – OUTLANDER/RENEGADE 1000

- Straighten and secure the Velcro seam making sure the cone is the correct size for the boot
- Ensure the cover does not fowl with any suspension components (top ball joint bolt or split pin)
- Rotate axle to ensure cover does not contact any suspension components
- Tighten axle clamp and re-check
- Repeat the above steps for front outer covers

8. Rear Outer

- Select the boot cover for the right rear outer. This cover requires the **012** clamp. The diff housing is not central in the frame so the cover must be clamped directly on top of the inner boot clamp.
- Tighten clamp and secure Velcro strips. Ensure fits boot and does not fowl in trailing arm.



9. Rear Outer

- Select L rear outer cover and **010** clamp
- Fit clamp to cover and place around axle. Start the thread on the clamp and tighten so the cover can slide up and down the axle.
- Straighten and secure the Velcro seam ensuring the cover fits the boot
- Ensure the cover does not contact the trailing arm. Tighten the clamp and re-check.



CV SAVER FITTING INSTRUCTIONS – OUTLANDER/RENEGADE 1000

10. Rear Inner

- Select a rear inner cover and **048** clamp
- Check direction of rotation to determine side to be fitted
- Fit clamp to cover and wrap around joint
- Fit clamp to inside of boot clamp
-



- Ensure clamp is square to CV boot clamp and tighten
- Straighten and secure Velcro strip
- Repeat steps A-G for remaining rear inner boot

11. Rotate all shafts to ensure no boot fowls on suspension components

YOU NOW HAVE EXTREME CV SAVER PROTECTION

ATTENTION:

- *Keep CV Savers clean and free of debris*
- *Clean out CV Savers at regular intervals*
- *Lubricate CV Savers with a silicon based lubricant to preserve the rubber boot*